High accuracy fiber optic amplifier with twin volume built in type

■Features

- •Convenient DIN rail mounting type
- •High speed response: Max. 1ms
- Able to adjust sensitivity with high accuracy by Coarse and Fine volume
- •Selectable Light ON/Dark ON mode by control wire
- •Overcurrent protection and Reverse power polarity protection
- •Able to use for explosion proof(Fiber part)
- Adjustable length with free cut type fiber optic cable



Please read "Caution for your safety" in operation

■Specifications

Model	BF3RX	BF3RX-P			
Response time	Max. 1ms				
Power supply	12-24VDC ±10%(Ripple P-P:Max. 10%)				
Current consumption	Max. 40mA				
Light source	Red LED (Modulated)				
Sensitivity adjustment	Adjustable VR(Double adjustment : Coarse adjustment, Fine adjustment)				
Operation mode	Selectable Light ON/Dark ON by control wire				
Control output	●NPN open collector output ☞ Load voltage: Max. 30VDC, Load current: Max. 200mADC, Residual voltage: Max. 1VDC	●PNP open collector output ☞ Output voltage: Min. (Power supply-2.5) VDC Load current: Max. 200mADC			
Protection circuit	Reverse polarity protection, Output short-circuit protection				
Indication	Operation indicator : Red LED				
Connection	Outgoing cable				
Insulation resistance	Min. 20MΩ (at 500VDC)				
Noise strength	±240V the square wave noise(pulse width:1μs) by the noise simulator				
Dielectric strength	1,000VAC 50/60Hz for 1minute				
Vibration	1.5mm amplitude at frequency of 10 \sim 55Hz in each of X, Y, Z directions for 2 hours				
Shock	500m/s ² (50G) in X, Y, Z directions for 3 times				
Ambient illumination	Sunlight: Max. 11,000/x, Incandescent lamp: Max. 3,000/x				
Ambient temperature	-10 ~ +50℃ (at non-freezing status), Storage: -25 ~ +70℃				
Ambient humidity	35 ~ 85%RH, Storage : 35 ~ 85%RH				
Material	Case: ABS				
Accessory	4P, ∮5mm, Length∶2m				
Cable	Adjustment driver, Mounting bracket, Bolts/Nuts				
Unit weight	Approx. 90g				


K-89 Autonics

Fiber Optic Amplifier

■Feature data

Transmitted beam

●Measurment : BF3RX + FT-420-10

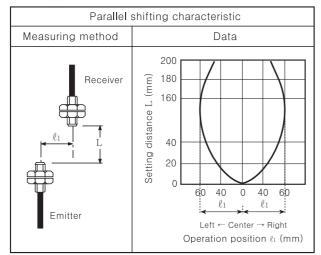


ODiffuse reflective

●Measurment : BF3RX + FD-620-10


Sensing area characteristic						
Measuring method	Data					
l _L	$\begin{array}{c} 50 \\ \text{(W)} \\ \text{20} \\ \text{0} \\$					

■ Control output diagram

•BF3RX

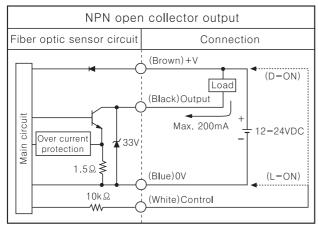


●BF3RX-P

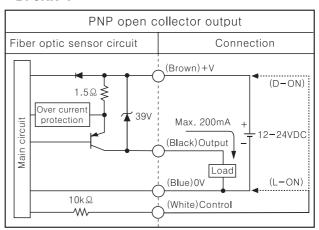

*When select Dark ON or Light ON, please use control wire(White) Light ON: Connect control wire to 0V Dark ON: Connect control wire to +V

Operation mode

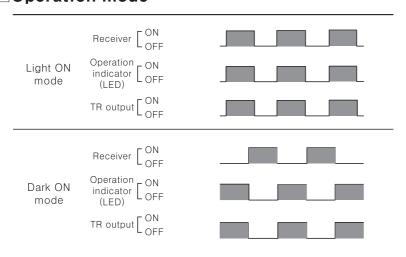

(A) Counter

(B) Timer

(C) Temp.

(D) Power controller

Panel meter

Tacho/ Speed/ Pulse meter

(G) Display unit

Sensor controller

Switching power supply

Proximity sensor

Photo electric sensor

Pressure sensor

Rotary encoder


(N) Stepping motor & Driver & Controller

(0) Graphic panel

Production stoppage models & replacement

Autonics K - 90


■ Connections

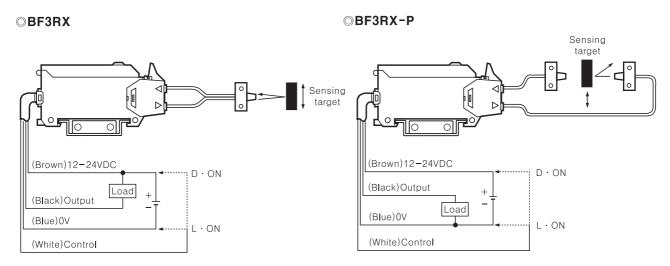

- *Able to use as Diffuse reflective type or Transmitted beam type according to the fiber Optic Cable.
- * Adapter marked Fiber Optic Cable should be used with Adapter(.).

Dimensions

(Unit:mm)

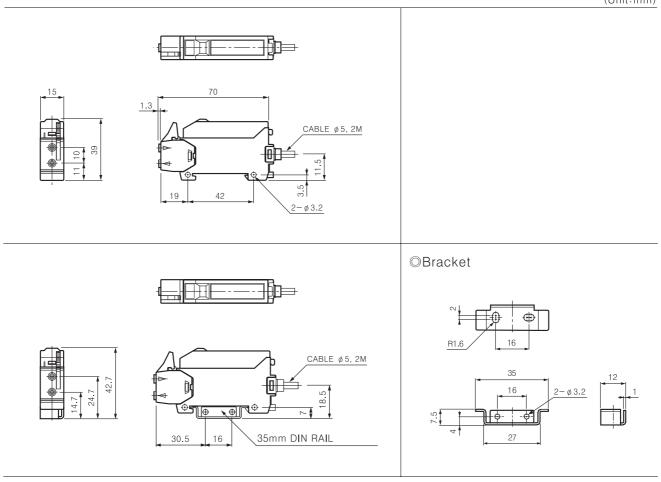

K-91 Autonics

Fiber Optic Amplifier

Sensitivity

- •Use by adjusting the optimal sensitivity according to the order written on the below table.
- •Please adjusting by observing operation lamp. Please observe below chart because operation lamp will be changed by sensing method.

Order	Sensing type			VR	
	Reflective	Transmitted beam	Adjusting	COARSE	FINE
1	Initial setting		VR(Coarse) should be fixed at min. and VR(Fine) should be fixed at center(▼).	MIN	(-) (+)
2	Light ON	Light ON	Adjust VR(Coarse) to ON position by turning clockwise	ON	(-) (+)
	ҵ҈Ӏ҈⊳	□	slowly when light is being received.		
3	Light ON	Light ON	Turn VR(Fine) until it is OFF toward(-), and turn until		AON
	□ >		it is ON toward(+) again, then confirm that this will be A position.		OFF ₍₋₎ (+)
4	Dark ON	Dark ON	And then turn VR(Fine) until it is ON toward(+), and turning until it is OFF toward(-) again when light is not received.	Coarse VR is	OFF B
	□ →	□•••□•□	Then confirm that this position will be B position. (When it will not be ON, max. position will be B.)	not required to adjust afterwards	(-) (+) ON
5			Fix it at middle of A and B position. This will be the best position to set.		A B (-) (+)
6	Light ON	Light ON	If you cannot adjust as above method, set VR(Fine) at	MIN	(-) (+) MAX
	□□□>	□ → ()□	max. position toward(+), then execute again.		

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/ Speed/ Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder

(N) Stepping motor & Driver & Controller

(O) Graphic panel

(P) Production stoppage models & replacement

Autonics K-92