## DIN W48×H48mm, Digital LCD Timer(Back Light type)

#### ■ Features


- •Upgrade Power supply
  - : **24-240VAC 50/60Hz** / 24-240VDC
- •Built-in battery allows memory protection and change of setting value
- •Wide range of time setting (0.01sec. ~ 9999hour)
- •Lock function for saving data
- •Various output modes (LE4S:10, LE4SA:7)
- •Soft touch setting type
- •High visibility LCD display with backlight
- •Independent ON/OFF time can be programmed in flicker output mode







### Ordering information

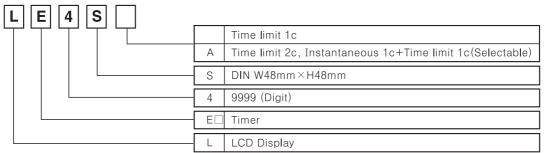

### Specifications

#### 

Model		LE4S	LE4SA	
Function		Multi time range, Multi operation		
Display method		Backlight LCD type(Character size: W4×H8mm)		
Power supply		<b>24-240VAC 50/60Hz</b> / 24-240VDC		
Allowable voltage range		90 ~ 110% of rated voltage		
Power consumption		Approx. 2.8VA(240VAC 60Hz), Approx. 1.2W(240VDC)		
Return t	ime	Max. 300ms	Max. 500ms	
Min.	START input			
input	INHIBIT input	Min. 20ms		
signal	RESET input			
	START input	●No-voltage input		
Input	INHIBIT input	Short-circuit impedance : Max. 1kΩ Residual voltage : Max. 0.5V		
	RESET input	Open-circuit impedance : Min. 100kΩ		
Timing operation		Signal ON Start	Power ON Start	
	Contact type	Time limit SPDT(1c)	Time limit DPDT(2c), Time limit SPDT(1c) + Instantaneous SPDT(1c):Selectable	
output	Contact capacity	250VAC 3A resistive load		
Relay	Mechanical	Min. 10,000,000 operations		
life cycle	Electrical	Min. 100,000 operations at 250VAC 2A resistive load		
Memory protection		10 years at 25℃ and when LCD and input key turns OFF, 40 days at 25℃ and when LCD and input key turns ON continually		
Output mode		10 kinds of operation mode	7 kinds of operation mode	
Ambient temperature		−10 ~ +55 °C (at non-freezing status)		
Storage temperature		-25 ~ +65℃ (at non-freezing status)		
Ambient humidity		35 ~ 85%RH		

 
B-17 Autonics


## ■ Specifications


Repeat error				
Setting error		Max. ±0.005% ±0.03sec(Signal Start)	Max. ±0.01% ±0.05sec	
Voltage error		Max. $\pm 0.01\% \pm 0.08$ sec(Power Start)		
Temperature error				
Insulation resistance		Min. 100MΩ (at 500VDC)		
Dielectric strength		2000VAC 50/60Hz for 1 minute		
Noise strength		$\pm 2$ kV the square wave noise(pulse width:1 $\mu$ s) by the noise simulator		
Vibration	Mechanical	0.75mm amplitude at frequency of 10 ~ 55Hz in each of X, Y, Z directions for 1hour		
	Malfunction	0.5mm amplitude at frequency of 10 ~ 55Hz in each of X, Y, Z directions for 10 minutes		
Shock	Mechanical	300m/s² (30G) in X, Y, Z directions for 3 times		
	Malfunction	100m/s <sup>2</sup> (10G) in X, Y, Z directions for 3 times		
Approval		C € c <b>\$\lambda</b> us		
Unit weight		Approx. 126g	Approx. 130g	

### Dimensions


Bracket




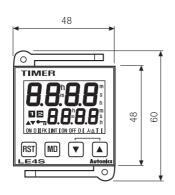

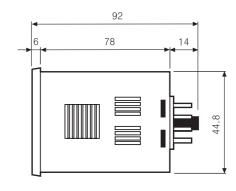

●Panel cut-out

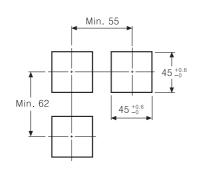

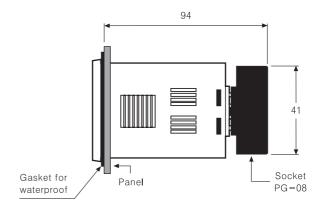

(Unit:mm)

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/ Speed/ Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder


(N) Stepping motor & Driver & Controller

(O) Graphic panel

(P) Production stoppage models & replacement


### Connections

#### **©LE4S**

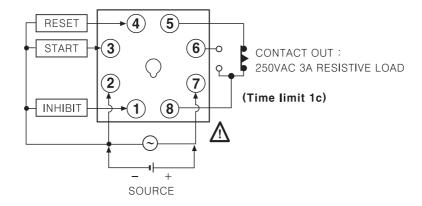


#### **©LE4SA**

●[ON.D] [ON.D.II] [FK] [INT] [T] [T.I] mode

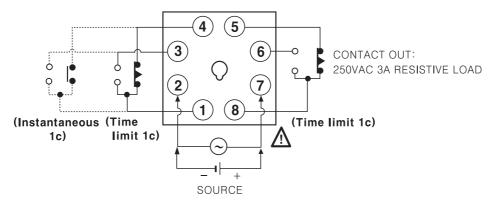

#[ON.D][ON.D.II][FK][INT] mode : Instantaneous 1c + Time limit 1c, Time limit 2c (Selectable) <math>#[T][T.I] mode : Fixed Time limit 2c

#### $\bullet$ [**人**-△] mode

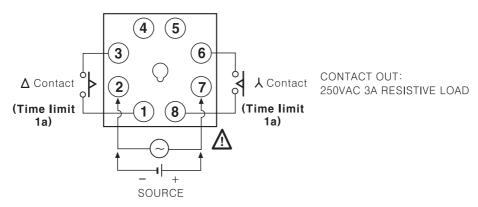


B-19 Autonics

#### Input connections

LE4S is No-voltage input(Short-circuit and open) type.

#### Solid-state input

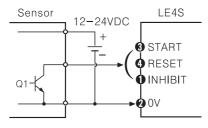

•Q1 is ON: Operating

•Sensor: NPN open collector output

Short-circuit level(Transistor:ON) Residual voltage: Max. 1V, Impedance : Max.  $1k\Omega$ 

Open-circuit level(Transistor OFF)

#### Contact input


LE4S

**ត់** START

🖒 RESET

**b** 0V

NHIBIT

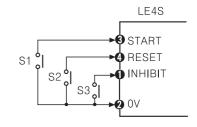

•Please use reliable contact enough to flow 5VDC 1mA.

•S1, S2, S3 are ON: Operating

Panel meter

(A)

(B) Timer

(C)

(D)

Temp.

Power controller

Counter

(F) Tacho/ Speed/ Pulse meter

> (G) Display unit

Sensor controller

Switching power supply

(J) Proximity sensor

Photo electric sensor

Pressure sensor

Rotary encoder

(N) Stepping motor & Driver &

(0) Graphic panel

Production stoppage models &



Sensor

RL \$


•Q2 is ON: Operating

•Sensor: NPN universal output

Q2 -

12-24VDC


### Front panel identification

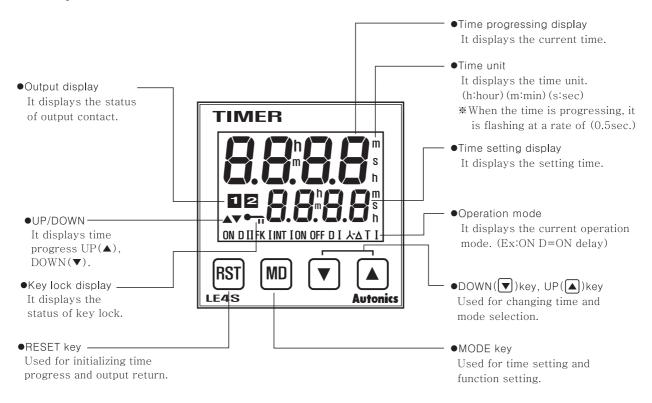

## **LE4S Series**

### ■Operation flow chart

This is the operation flowchart of **LE4S and LE4SA**. (Refer to B-22~26 for the specific description.) Always program the Timer range, the output operation mode and the setting value in that sequence. Note) If changing the previous output operation mode, the setting value might be deleted.

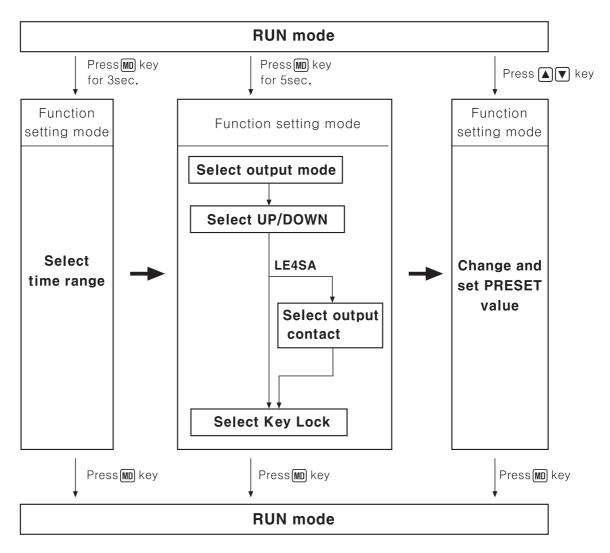


#### OFactory Default setting

Model	Output mode	Up/Down mode	Output contact	Time range	Key lock
LE4S	ON DELAY	UP	Time limit 1c	99.99sec	LoFF(Lock off)
LE4SA	ON DELAY	UP	Time limit 1c + Instantaneous 1c	99.99sec	Lock1(RST key can not be used.)

B-21 Autonics

### ■Time specifications(Press № key for 3sec)

•Time range specifications

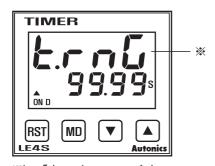



\*\*Ernū is a character of time range mode displayed in LCD.
It will be displayed continuously


It will be displayed continuously until the selection of time range is completed.

Time range	Time range specification	
99.99s	0.01sec ~ 99.99sec	
999.9s	0.1sec ~ 999.9sec	
9999s	1sec ~ 9999sec	
99m59s	1m01sec ~ 99min 59sec	
999.9m	0.1min ~ 999.9min	
9999m	1min ~ 9999min	
99h59m	1h01min ~ 99hour 59min	
99.99h	0.01hour ~ 99.99hour	
999.9h	0.1hour ~ 999.9hour	
9999h	<b>9999h</b> 1hour ~ 9999hour	


●Time range selection method(**99m 59sec**)

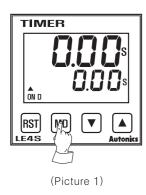

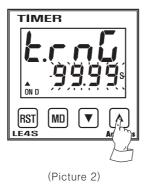

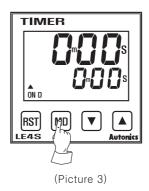

- 1) Pressing m key for 3sec.in RUN mode, it will enter into Time range selection mode. (Picture 1)
- 2) After entering into the time range mode, "99.99s" will be displayed as factory default setting. (Picture 2)
- 3) Select time range as **99m59s** by pressing **▼** and **▲** keys(Press **▲** key 3 times)
- 4) Press me key and Time range selection will be completed and return to RUN mode. (Picture 3)
- \*If no keys is touched for 30sec., it will return to RUN mode.
- \*Pressing Me key, output contact(1c.1c) of factory default setting(**LE4SA**) will be displayed before entering into setting mode.
- \*Time range flow chart

 

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/ Speed/ Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure

(M) Rotary encoder


(N) Stepping motor & Driver & Controller

(O) Graphic panel

(P) Production stoppage models & replacement

### ■ Selection of output operation mode and function (Press № key for 5sec)

Output operation mode by each model

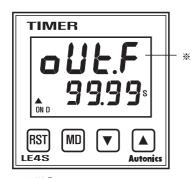


\*"aULF" is a character of output mode displayed in LCD. It will be displayed continuously until the selection of output operation is completed.

NO	Display	LE4S	LE4SA	Note	
1	ON D	ON DELAY	ON DELAY		
2	ON D I	ON DELAY1	None		
3	ON D II	ON DELAY2(One-shot output)	ON DELAY2	<b>※</b> 1	
4	FK	FLICKER	FLICKER	* 0	
5	FKI	FLICKER1	None	<b>*</b> 2	
6	INT	INTERVAL-DELAY	INTERVAL-DELAY		
7	INT I	INTERVAL-DELAY1	None		
8	ON OFF D	ON-OFF DELAY	None		
9	ON OFF D I	ON-OFF DELAY1	None		
10	OFF D	OFF DELAY	None		
11	<b>人</b> - Δ	None	人-△TIMER		
12	Т	None	TWIN TIMER		
13	ΙΤ	None	TWIN TIMER 1		

(\*1)Output of **ON D II** mode is One-shot output and output operation time is fixed as 0.5sec.

(\*2) Able to set Ton and Toff time differently in "FK, FK 1".


#### Selection of output operation

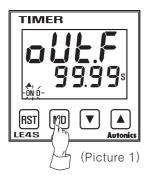


- 1)Pressing we key for 5sec.in RUN mode, it will enter into output operation selection mode then "ON D" will flaxh. (Picture1)
- 2) After selecting output operation mode by pressing lacktriangledown, lacktriangledown key.
  - **※** [A] key: Shift to CW, ▼ key: Shift to CCW
- 3) Pressing me key to complete output operation then will move to UP/DOWN selection mode.
- \*If no key is touched for 30sec. it will return to RUN mode.

#### Flowchart of output operation mode
 
#### < LE4S >




#### < LE4SA >

 


B-23 Autonics

#### Selection of UP/DOWN

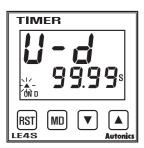

 - 1) After entering into this mode, "U-d" will be displayed then "▲" will flash.
- 2) After selecting  $UP(\blacktriangle)$ ,  $DOWN(\blacktriangledown)$  by pressing  $\blacktriangledown$ ,  $\blacktriangle$  then press  $\blacksquare$  key.




- 3) Press Me key, UP/DOWN will be completed then move to key lock(LE4S) mode or move to output contact selection mode(LE4SA).
- \*\*"U-d" is a display of UP-DOWN in LCD display, it will be displayed continuously until the selection is completed.
- \*If no key is touched for 30sec., it will return to RUN mode.

#### •Selection output contact(Available in **LE4SA** only)



 
- 1) It displays Instantaneous 1c + Time limit 1c, factory default setting.
- 2) Select proper output contact for output operation mode by ▼ and ▲ key. (Refer to LE4SA connection of B−19 page for output contact.)




- 3) After selecting output contact then press key.
- 4) Pressing we key will complete output contact selection then move to key lock selection mode.
- \*\*Pressing Mo key in RUN mode, it is able to check the output contact.

  Be sure not to press Mo more than 3 sec. (It will enter into another mode.)
- **\*\***"cont" is a displayed characteristic of output contact in LCD display. It will be displayed continuously until the selection is completed.
- \*If no key is touched for 30sec., it will return to RUN mode.

#### Selection key Lock

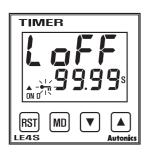

 - 1) Factory default setting is Lock OFF.
- 2) Please select Key Lock by pressing ▼, ▲.



- 3)Press  $\mathbf{m}$  key to complete key lock selection and then return to RUN mode.
- \*If no key is touched for 30sec., it will return to RUN mode.

#### \*Key Lock function



Turns off the Lock mode.



RST key cannot be used.



, A key cannot be used.



RST key, ▼, ▲key cannot be used.

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/ Speed/ Pulse meter

(G) Display unit

(H) Sensor controller

(I) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure sensor

(M) Rotary encoder

(N) Stepping motor & Driver & Controller

(O) Graphic panel


(P) Production stoppage models & replacement

## **LE4S Series**

#### ■ Change of time setting


Please set operation time according to following instruction as the setting is different depending on the output operation mode.

Output operation mode: ON D, OND I, OND II, INT, INT I, ON OFF D, ON OFF D I, OFF D

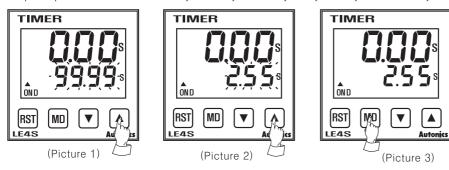


- 1) Display of setting time will be flickering when you pressing ▼ or ▲ key at RUN mode. (Picture 1)
- 2) Set the setting time with ♥ or ♠ key. If pressing ♠ key once, it will increase by 1 digit.

  If pressing ♠ key(♥ key) the number will continually increase (decrease). Pressing ♠ key(♥ key) longer than 2sec, will cause the number to increase (decrease) faster. (Picture 2)
- 3) When the setting is completed, it will be saved and return to RUN mode by pressing (M) key. (Picture 4)
- \*Notice time is progressed during the change.
- \*\*If the set value is 0, "Err" will be displayed. ("Err" will be removed by pressing ▼, ▲ key)
- \*If no key is touched for 30sec., it will return to RUN mode.
- ●Output operation mode: FK, FK I (There is no [FK I] in LE4SA)

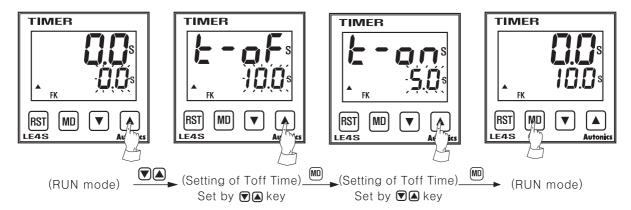


- \*\*Ton and Toff can be set differently.
- ●Output operation mode: STAR DELTA ( 人-4 (LE4SA only.)

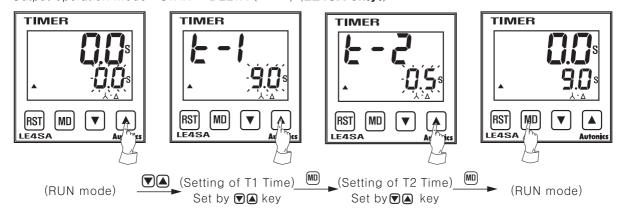

- **%**T1: Setting time, T2: **λ**-Δ switching time
- \*T1 setting time range: 0.1s~9999h, T2 setting time range: 0.05s~9999h
  - ☞ If T2 is longer than 0.05sec, "Err" will be displayed.


B-25 Autonics

●Output operation mode: TWIN TIMER [ T ] (LE4SA only)

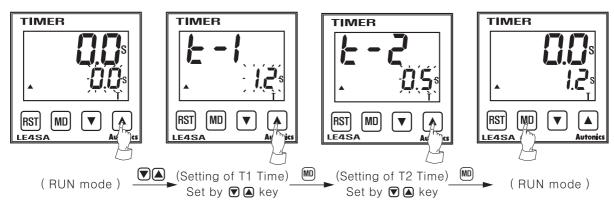

- \*T1 and T2 can be set as same as differently.
- \*The setting time range of T1, T2 is within the operation range of the prior time range.

  Ex) When 99.99s of time range is selected, the setting range of T1 and T2 are within 0.01~99.99 sec.
- ●Output operation mode: TWIN TIMER(TI) (LE4SA only)

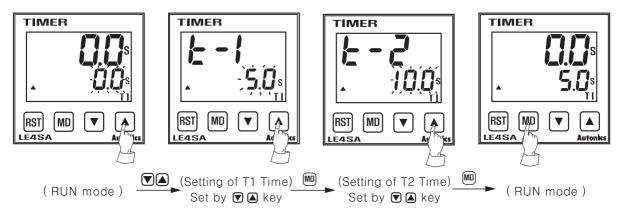

- \*The setting time range of T1, T2 is within the operation range of the prior time range.
- Ex) When 99.99s of time range is selected, the setting range of T1, and T2 are within 0.01~99.99 sec.

(A) Counter

(B) Timer

(C) Temp. controller

(D) Power controller

(E) Panel meter

(F) Tacho/ Speed/ Pulse meter

(G) Display unit

(H) Sensor controller

Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

(L) Pressure

(M) Rotary encoder


(N) Stepping motor & Driver & Controller

(O) Graphic panel

(P) Production stoppage models & replacement

### ■LE4S Output operation mode


T, Ton, Toff=Setting time

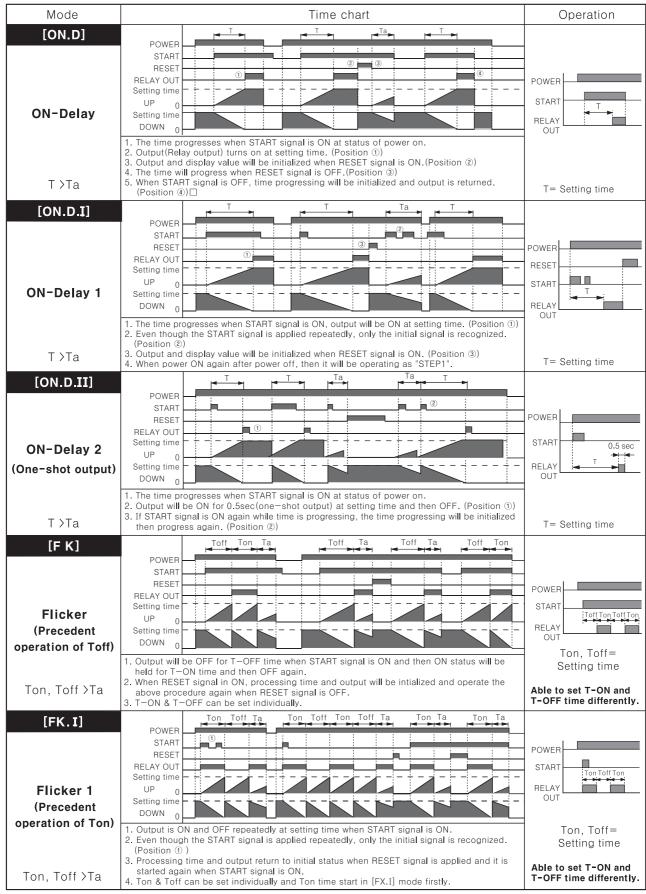

※Initial status: UP mode-display value is "0", output is "OFF".


DOWN mode-display value is "setting time", output is "OFF".

B-27 Autonics

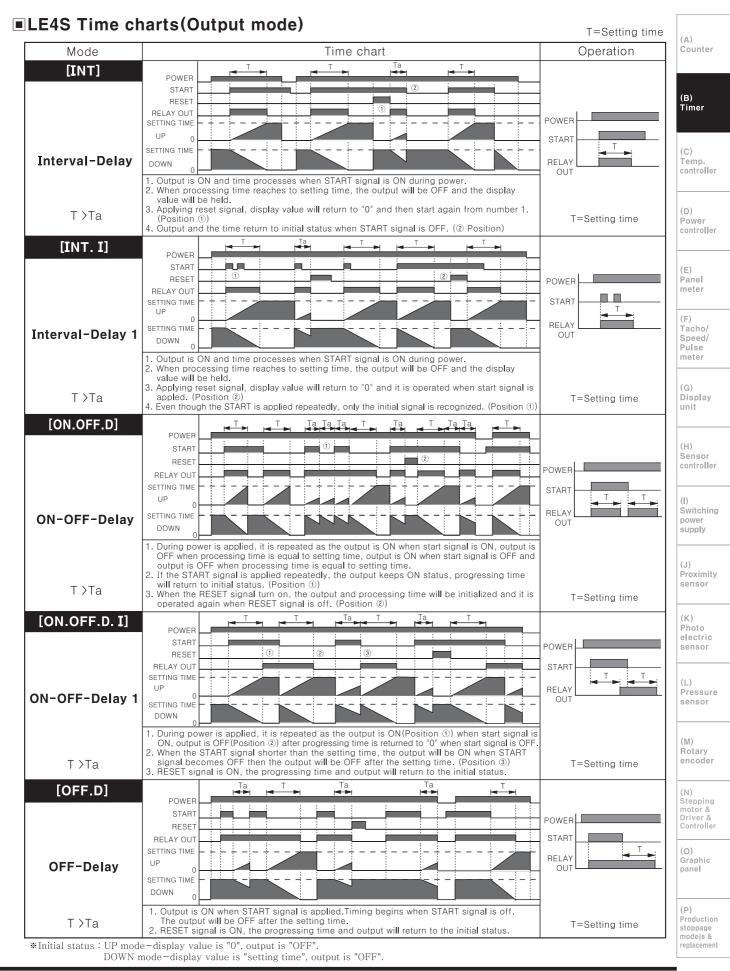

### ■LE4SA Time charts(Output mode)

T, Ton, Toff=Setting time, Rt: Return time(Min. 200ms)

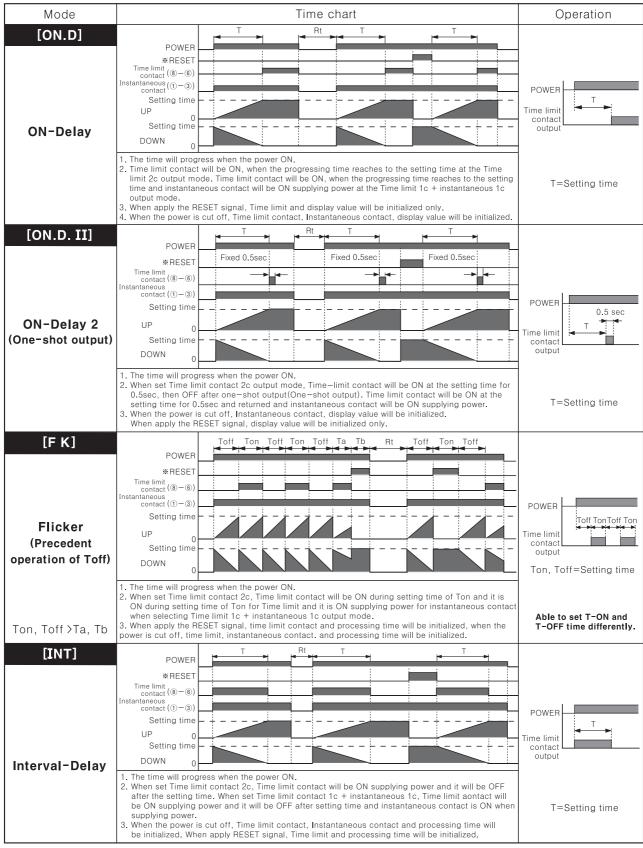


\*Initial status: UP mode-display value is "0", output is "OFF".

DOWN mode-display value is "setting time", output is "OFF".

\*Instantaneous contact(OUT2) will be returned when power is off.

 $\ensuremath{\text{\#RESET}}$  Key can be used at Loff or Loc2 setting only.

B-29 Autonics

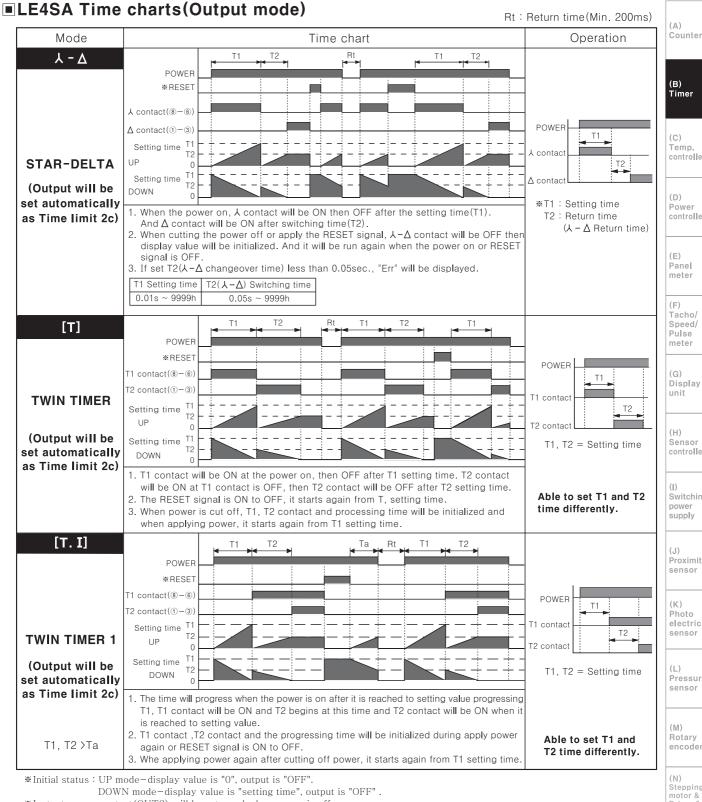

<sup>\*</sup>Instantaneous contact(OUT2) will be returned when power is off.

Temp. controlle

Power controlle

Panel

Tacho/ Speed/ Pulse meter

Display

controller

Switching supply

Proximity sensor

Photo electric sensor

Pressure sensor

Rotary encoder

(N) Stepping motor & Driver &

Graphic panel

Production stoppage models & replacement

<sup>\*</sup>RESET key is locked by factory default setting, so please use it after cancelling the lock.

## **LE4S Series**

#### Proper usage

#### **∧** Caution

It may give an electric shock if touch the input signal terminal (Between START, RESET, INHIBIT and terminal 2) when the power is supplied.

#### ©Power connection

- Connect AC power line between (②-⑦) for LE4S,
   LE4SA AC power type. But be aware of power connection for DC power type. (② ← ⑤, ⑦ ← ⑥)
- •LE4S, LE4SA work stably within range of rated power. (If using power line with another high voltage line or energy line in the same conduit, it may cause inductive voltage. Therefore please use seperate conduit for power line)

#### OPower start

•Caution for power rising time(100ms) after power on and power falling time(200ms) after power off.



●Power start

LE4SA model is starting after 100ms of applying power (Refer to the above figure.)

(Pleaes use over 100ms setting)


When you need under 100ms setting, please use Signal start type LE4S.


•Please supply power quickly as using switch or relay contact, otherwise it may cause timing error.

#### OInput/Output


- •Power terminal and Input terminal have not been insulated because there is no power transformer in this Timer.
- ①When using the sensor of SSR output type with input terminal of timer, please check whether Double insulated or not.
- ②Please use double insulated relay when connecting relay output with input terminal.
- •Please use 8pin socket when connecting this Timer with other equipment and do not touch the socket when power on.
- •Please use Power supply with over current protection circuit.(250V 1A fuse)
- When using relay contact as input signal, please use a contact that can function reliable at 5VDC, 1mA.

- •In case of connecting START terminal (③) and power terminal(②) of LE4S, do not use it to start at the same time applying power.
  - Please use relay contact or transistor to start. (Time error can be occurred under 100ms setting because of rising time of Timer).
- •LE4S is Transformer Less type, therefore please check following for connecting relay contact for input signal and transistor.

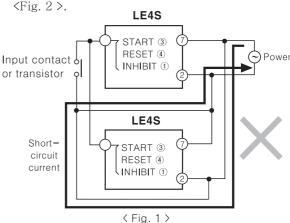

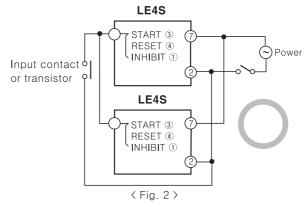

②Please use transfomer with primary and secondary isolated for input.

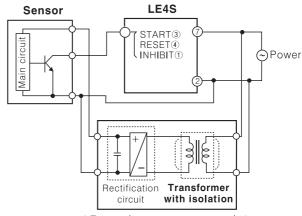


External sensor power supply >

B-31 Autonics

- •Please supply power to LE4SA after checking operation specification.
- •If setting \[ \text{0000} \] for operation time, output may not work.

#### OInterval mode

Able to make Instantaneous ON and Time limit OFF (Holding device) with using interval mode.

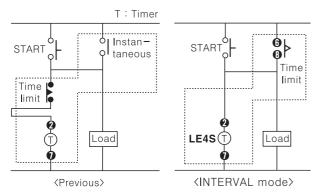

Change of output operation mode and Timer range If changing output operation mode or Time range, previous PRESET value will be deleted.

But, Up/Down selection mode and Lock mode are exception.

#### ©Each mode and time setting by internal battery

- •It is able to set or change the time setting and function without external power supply because there is a lithium battery built in type, LE4S/LE4SA.
- •If pressing any keys on front after purchasing this product, factory specification will be displayed in LCD window. (But, LCD backlight and output are OFF) Time range mode, output operation mode, Up/Down mode, setting time are set in sequence.

LCD backlight will be on after setting complete.

- •When turning off the power from an external during the operation.
  - ①LCD and output are OFF
  - 2If pressing any key on front, time progressing will be "0".
    - **\*LCD** Backlight, input signal and output do not work. \*If no keys are touched for 30sec after LCD is ON, LCD will be OFF. (Economical in power consumption)
  - (3) At this time, it is able to set or change values of each mode and setting time.
  - 4When supplying power again, it is changed as 3 and progcessing time and output will be intialized.

#### OChange of preset value

- If changing setting value while time progressing, new preset value should be higher than previous preset value. Otherwise output may work while changing setting value.
- •If changing setting value while it is running, it will work as changed setting value. Please use LOCK function in order to avoid malfunction.

#### OInternal battery

- •Data will not be lost when power failure because of internal battery.
- •Battery life cycle is about 10years(No key operation). This product can work for 40days without external power supply. (25°C)
- •Do not use this product near by fire, there is Lithium battery built in.

#### ONoise

We test 2kV, pulse width 1µs against Impulse voltage between power terminals and 1kV, Pulse width 1µs at noise simulator against external noise voltage. Please install MP condensor (0.1~1μF) or Oil condensor between power teminals when over IMPULSE noise voltage occurs.


#### **©**Environment

Please avoid the following places;

- •Where this product may be damaged by strong impact or vibration.
- •Where there are corrosive gas or flammable gas and water,oil, dust exist.
- •Where magnetic and electrical noise occurs.
- •Where there are high temperature and humidity beyond rated specification.
- •Where there are strong alkalis and acids.
- •Where there are direct rays of sun.

#### 

- 1) Insert LE4S, LE4SA into hole on the panel.
- 2) Fix the body by pushing the bracket against the panel.
- 3) Tighten 2 screws in the bracket.

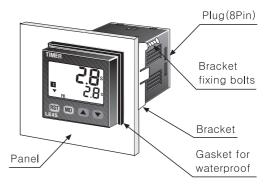

Counter

(B) Timer

Temp.

(D) Power controller

(E) Panel meter

(F) Tacho/ Speed/ Pulse meter

Display unit

(H) Sensor controller

(|) Switching power supply

(J) Proximity sensor

(K) Photo electric sensor

Pressure

(IVI) Rotary encoder

Stepping motor & Driver & Controller

Graphic panel

(P) Production stoppage models & replacement