
CSM_E3G_DS_E_5_1

Line of Long-distance **Photoelectric Sensors for Large Workpieces Includes Retro**reflective Models with Sensing Distance of 10 m and Distance Settings Up to 2 m.



- Distance-setting models feature a teaching function.
- Stability indicator shows at a glance when operating conditions are stable.
- Relay and selectable NPN/PNP transistor outputs provided.
- Cable, standard connector, and terminal board models available.



Be sure to read Safety Precautions on page 8.





Ordering Information

Sensors (Refer to Dimensions on page 10.)

Sensors (Refer to	Sensors (Refer to <i>Dimensions</i> on page 10.)							
	Appear-			Timer	Model			
Sensing method	ance	Connection method	Sensing distance	function	NPN/PNP selector	Relay output		
		Pre-wired (2 m)			E3G-R13 2M			
Retro-reflective	E39-R2 (provided)	Connector (M12)	\$10 m	E	E3G-R17			
(with MSR function)		Terminal block	(500 mm)			E3G-MR19		
			*	Yes		E3G-MR19T		
		Pre-wired (2 m)			E3G-L73 2M			
Distance setting		Connector (M12)	White paper (300 × 300 mm)		E3G-L77			
Distance-setting		Tamaka al lala ala	0.2 to 2 m			E3G-ML79		
	~	Terminal block		Yes		E3G-ML79T		

^{*} Values in parentheses indicate the minimum required distance between the Sensor and Reflector.

Accessories (Order Separately)

Reflectors (Refer to Dimensions on E39-L/F39-L/E39-S/E39-R.)

Appearance	Sensing distance (typical)	Model	Minimum order	Remarks
	10 m (500 mm) (Rated value)*	E39-R2	1	Provided with the E3G-R1□/MR19(T).
	6 m (100 mm)*	E39-R1	1	

^{*} Values in parentheses indicate the minimum required distance between the Sensor and Reflector.

Terminal Protection Cover for Side-pullout Cable (Refer to Dimensions on page 12.)

Appearance	Model	Minimum order	Applicable model	Remarks
	E39-L129	1	E3G-MR19(T) E3G-ML79(T)	Provided with rubber bushing and cap for pullout prevention in vertical direction.

OMRON

Mounting Brackets (Refer to E39-L/F39-L/E39-S/E39-R)

Appearance	Model	Quantity	Applicable model	Remarks
	E39-L131	1	E3G-R1□	
	E39-L132	1	E3G-L7□	Rear-mounting use
	E39-L135	1	E3G-MR19(T)	Cable pulled out in the downward direction
	E39-L136	1	E3G-ML79(T)	

Note: Mounting Brackets are not provided with Sensors and must be purchased separately.

Sensor I/O Connectors (M12) (Refer to *Dimensions* on XS2.)

Cable	Appearance		Cable type		Model
	Q		2 m		XS2F-D421-DC0-A
Standard	Straight		5 m	Three- conductor type	XS2F-D421-GC0-A
			2 m		XS2F-D422-DC0-A
	L-shaped		5 m	1	XS2F-D422-GC0-A

Note: Refer to Introduction to Sensor I/O Connectors for details.

Ratings and Specifications

Sensing	method	Ret	tro-reflective (v	vith MSR funct	ion)		Distanc	e-setting	
Item	Model	E3G-R13	E3G-R17	E3G-MR19	E3G-MR19T	E3G-L73	E3G-L77	E3G-ML79	E3G-ML79T
Sensing d	listance	10 m (500 mm))*1 (when using	E39-R2)		White paper (3	300 x 300 mm): (0.2 to 2 m	
Setting dis	stance		-			White paper (3	300 x 300 mm): (0.5 to 2 m	
Standard sensing o	bject	Opaque: 80-mr	m dia. min.						
Differentia (typical)	al travel		-			10% of setting distance			
Directiona	al angle	Sensor: 1° to 5	0				-		
Reflectivit acteristics white erro	s (black/						: 1-m sensing dis	stance)	
Light sour (waveleng		Red LED (650	nm)			Infrared LED (860 nm)		
Spot size			-			70 dia. max. (a	at 1-m sensing d	istance)	
Power sup voltage	pply	10 to 30 VDC, ripple (p-p): 10°	%	12 to 240 VDC ripple (p-p): 10 24 to 240 VAC 60 Hz)% max.	10 to 30 VDC, ripple (p-p): 10)% (p-p)	12 to 240 VDC ripple (p-p): 10 24 to 240 VAC 60 Hz)% max.
Current/Po		50 mA max.		2 W max.		60 mA max.		2 W max.	
Control output Load power s 30 VDC max. Load current: Residual volta NPN output: 1 PNP output: 2 Open collecto (NPN/PNP se		Load power suj 30 VDC max. Load current: 1 Residual voltag NPN output: 1.2 PNP output: 2.0 Open collector (NPN/PNP sele L.ON/D.ON sel	00 mA max. ge: 2 V max. 0 V max. output ectable)	Relay output: SPDT, 3 A (cos¢= 1) max. at 250 VAC or 3 A max. at 30 VDC L.ON/D.ON selectable		Load power su 30 VDC max. Load current: Residual volta. NPN output: 1 PNP output: 2 Open collector (NPN/PNP sel L.ON/D.ON se	100 mA max. ge: .2 V max. .0 V max. output ectable)	Relay output: 3 (cos\phi=1) max 3 A max. at 30 L.ON/D.ON se	at 250 VAC or VDC
Life expect- ancy	Me- chani- cal			50,000,000 operations min. (switching frequency: 18,000 operations/h)		-	50,000,000 operations (switching frequency: operations/h)		
(relay output)	Electri- cal			100,000 operations min. (switching frequency: 1,800 operations/h)		-		100,000 operations min. (switching frequency: 1,800 operations/h)	
Protection circuits		Power supply reprotection, Outportection, Mut ence prevention	out short-circuit ual interfer-						ence preven-
Response	time	Operate or rese	et: 1 ms	Operate or reset: 30 ms max.		Operate or reset: 5 ms			et: 30 ms max.
Sensitivity adjustmer	y nt	One-turn adjus	ter	ı		Teaching (in NORMAL or ZONE mode)			
Timer fun	ction				ON- or OFF- delay: 0 to 5 s (adjustable)				ON- or OFF- delay: 0 to 5 s (adjustable)
Ambient illuminatio (Receiver		Incandescent la Sunlight: 10,00	amp: 3,000 lx m 0 lx max.	ax.					
Ambient to		Operating: -25	° to 55°C, Stora	ge: -30° to 70°	C (with no icing	or condensation	1)		
Ambient h range	umidity	Operating: 35%	% to 85%, Storaç	ge: 35% to 95%	(with no conden	nsation)			
Insulation resistance		20 M Ω min. at	500 VDC						
Dielectric strength		1,000 VAC, 50/	60 Hz for 1 min	2,000 VAC, 50 1 min.)/60 Hz for	1,000 VAC, 50/60 Hz for 1 min 2,000 VAC, 50/60 Hz for 1 min.)/60 Hz for	
Vibration resistance					s each in X, Y, and Z directions				
Shock resistance Destruction: 500 m/s² 3 times each in X, Y, and Z directions									
Degree of protection		IEC 60529 IP6	7 (with protectiv	e cover)					
Connection method	on	Pre-wired (Standard length: 2 m)	Connector (M12)	Terminal block	(Pre-wired (Standard length: 2 m)	Connector (M12)	Terminal block	(
Weight (packed s	tate)	Approx. 150 g	Approx. 50 g	Approx. 150 g			Approx. 50 g	Approx. 150 g	
Mate	ase	PBT (polybutyle	ene terephthala	te)					
rial Le	ens	Mechacrylic res	sin						
	ies *2	Reflector Adjus	stment screwdri	ver, and Instruc	tion manual	Adjustment sc	rewdriver and In	struction manua	ıl

^{*1.} Values in parentheses indicate the minimum required distance between the Sensor and Reflector. *2. Mounting Brackets are sold separately.


OMRON


Engineering Data (Typical)

E3G-R/MR Retro-reflective Models

Excess Gain vs. Set Distance

Parallel Operating Range

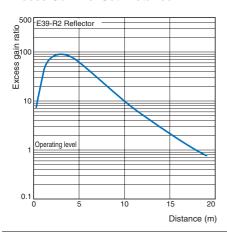

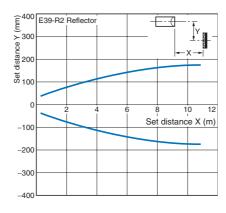



E3G-L/ML Distance-setting Models


Spot Diameter vs. Sensing Distance

Operating Range in NORMAL Mode

Operating Range in ZONE Mode

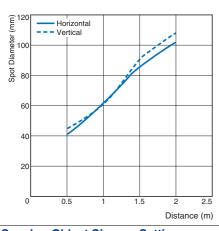

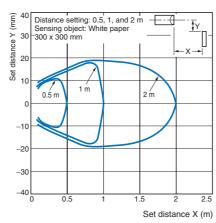


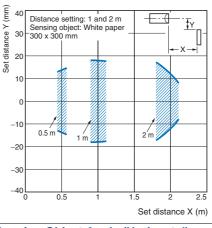



Sensing Object Size vs. Setting Distance

Sensing Object Angle Characteristics (Vertical)

Sensing Object Angle (Horizontal)

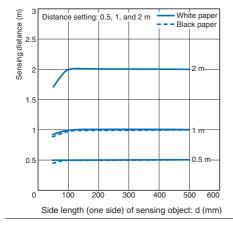

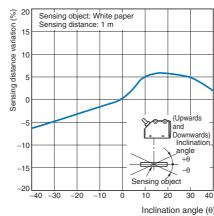


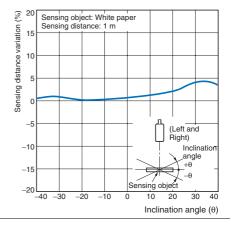


Close-range Characteristics

2.03 m 2.03 m 1.5 0.51 m 0.52 m 0.51 m 0.52 m 0 mm Black paper (0.5 m) (0.5 m) (2 m) (2 m) Material (teaching distance m)

Sensing Distance vs. Sensing Object Material (at 1-m Setting Distance)

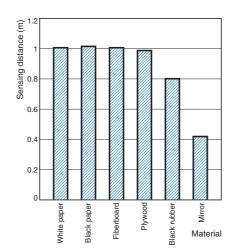

Sensing Distance vs. Sensing Object Material (at 500-mm Setting Distance)

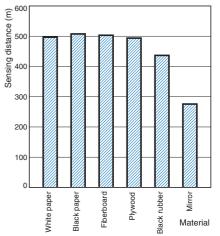

I/O Circuit Diagrams

NPN Output

Model	Operation mode	Timing charts	Operation selector	Output circuit
E3G-R13 E3G-R17	Light-ON	Incident light No incident light Operation ON indicator OFF (orange) Output ON transistor OFF Load Operate (relay) Reset	L side (L-ON)	Operation indicator (Orange) Photo-electric Sensor output selector output selector output selector Sensor Output Sensor Output Selector Sensor Output Sensor Output Selector Sensor Ou
E3G-H17 E3G-L73 E3G-L77	Dark-ON	Incident light No incident light Operation ON indicator OFF (orange) Output ON transistor OFF Load Operate (relay) Reset	D side (D-ON)	* Set the NPN or PNP selector to NPN. Connector Pin Arrangement O Pin 2 is not used.

PNP Output

Model	Operation mode	Timing charts	Operation selector	Output circuit
E3G-R13 E3G-R17	Light-ON	Incident light No incident light Operation ON indicator OFF (orange) Output ON transistor OFF Load Operate (relay) Reset	L side (L-ON)	Operation indicator (Green) Photo-electric Sensor main circuit NPN output ZD Brown 10 to 30 VDC PNP output ZD WPN or PNP output selector output Sensor main circuit NPN output ZD Load current
E3G-L73 E3G-L77	Dark-ON	Incident light No incident light Operation ON indicator OFF (orange) Output ON transistor OFF Load Operate (relay) Reset	D side (D-ON)	* Set the NPN or PNP selector to PNP. Connector Pin Arrangement O V Pin 2 is not used.

OMRON 5

Relay Output

Timer func-tion	Model	Timing charts	Operation selector	Output circuit
None	E3G -MR19	Incident light No incident light Operation ON indicator OFF Orange) Ta OFF	L side (L-ON)	
None	E3G -ML79	Incident light No incident light Operation ON indicator (orange) Ta OFF	D side (D-ON)	Tc Ta Contact output (G6C Relay built in)
Yes	E3G -MR19T	Incident light No incident light ON-delay* OFF-delay* OFF	L side (L-ON)	Photo- electric Sensor main circuit Power 12 to 240 VAC or supply (no polarity restriction)
165	E3G -ML79T	Incident light No incident light ON-delay* OFF OFF-delay* OFF	D side (D-ON)	


Note: Td1, Td2: Delay time (0 to 5 s)

T1: A period longer than the delay time.

T2: A period shorter than the delay time.

* For ON- and OFF-delay timers, Td1 and Td2 are independently variable.

Plug (Sensor I/O Connector)



Classifi- cation	Wire color	Connector pin No.	Application
	Brown	1	Power supply (+V)
DC		2	
ЪО	Blue	3	Power supply (0 V)
	Black	4	Output

Note: Pin 2 is not used.


Nomenclature

Retro-reflective

E3G-R13 (Pre-wired Model)
E3G-R17 (Standard Connector Model)




E3G-MR19 (Terminal Block Model) E3G-MR19T (Terminal Block Model with Timer)

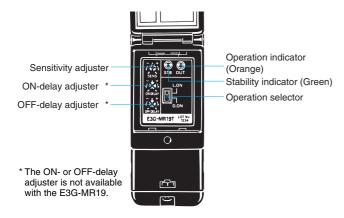


Distance-setting

E3G-L73 (Pre-wired Model) E3G-L77 (Standard Connector Model)

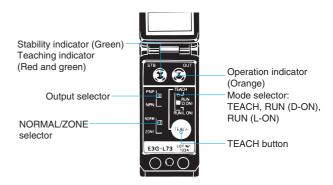

E3G-ML79 (Terminal Block Model) E3G-ML79T (Terminal Block Model with Timer)

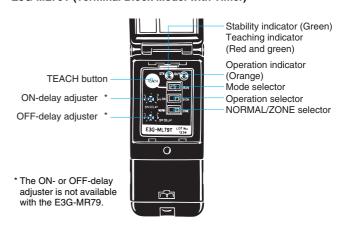

Safety Precautions

Refer to Warranty and Limitations of Liability.



This product is not designed or rated for ensuring safety of persons either directly or indirectly. Do not use it for such purposes.



Precautions for Correct Use

Do not use the product in atmospheres or environments that exceed product ratings.

E3G-R/MR

Designing

Power Supply

A power supply with full-wave rectification can be connected to the ${\sf E3G-MR19}(T)$.

Wiring


The tensile strength of the cable during operation should not exceed the values shown below.

Model	Tensile strength (torque)
E3G-R13 E3G-MR19(T)	50 N max.
E3G-R17	10 N max.

Adjusting

Indicators

- The following illustration indicates the operating levels of the E3G.
- Set the E3G so that it will work within the stable operation range.

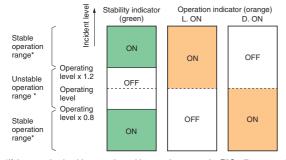

*If the operating level is set to the stable operation range, the E3G will operate with the highest reliability and without being influenced by temperature change, voltage fluctuation, dust, or setting change. If the operating level cannot be set to the stable operation range, pay close attention to environmental changes while operating the E3G.

E3G-L/ML

Designing

Power Supply

A power supply with full-wave rectification can be connected to the E3G-ML79(T).

Wiring

The tensile strength of the cable during operation should not exceed the values shown below.


Model	Tensile strength (torque)
E3G-L73 E3G-ML79(T)	50 N max.
E3G-L77	10 N max.

Mounting


Mounting

Mounting Directions


 Make sure that the sensing side of the Sensor is parallel with the surface of each sensing object. Do not incline the Sensor towards the sensing object.

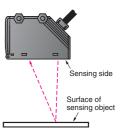


If the sensing object has a glossy surface, incline the Sensor by 5° to 10° as shown below, provided that the Sensor is not influenced by any background objects.




 If there is a mirror-like object below the Sensor, the Sensor may not be in stable operation. Therefore, incline the Sensor or keep the Sensor a distance away from the mirror-like object as shown below.



 Make sure not to install the Sensor in the incorrect direction. Refer to the following.

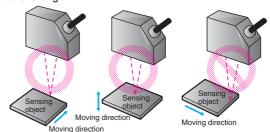

Install the Sensor as shown in the following if each sensing object greatly differs in color or material.

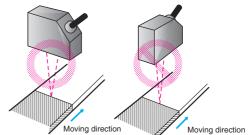

Others


EEPROM Write Errors

If a teaching data error occurs with the operation indicator flashing due to a power failure or static noise, perform the teaching operation of the Sensor again.


E3G-M□(T)

Wiring

- The cable with an external diameter of 6 to 8 mm is recommended.
- Be sure to attach the cover with screws securely in order to maintain the water- and dust-resistive properties of the product. The size of the conduit opening is PF1/2 in accordance with JIS B0202.
- Do not tighten the Terminal Protection Cover with wires pinched between the Sensor and the cover in order to maintain the waterand dust-resistive properties of the product.

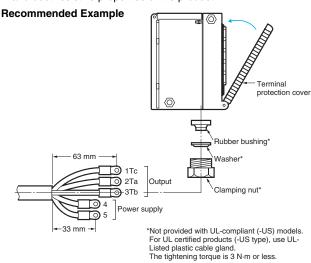

• Changing to Side-pullout Cable from Vertical-pullout Cable

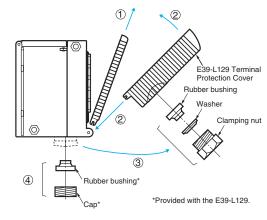

Proce- dure	Operation
1	Remove the present cover.
2	Attach the E39-L129 Terminal Protection Cover for side-pullout cable.
3	Remove the clamping nut, washer, and rubber bushing of the E3G. These are used for the side-pullout cable.
4	Attach the rubber bushing and cap provided with the E39-L129 to the E3G as replacements.

All E3G Models

Designing

Load Relay Contact

If E3G is connected to a load with contacts that spark when the load is turned OFF (e.g., a contactor or valve), the normally-closed side may be turned ON before the normally-open side is turned OFF or vice-versa. If both normally-open output and normally-closed output are used simultaneously, apply an surge suppressor to the load. Refer to *OMRON's PCB Relays Catalog* (X33) for typical examples of surge suppressors.

Wiring

Connecting and Wiring

The E3G has a built-in function to protect the E3G from load shortcircuiting. If load shortcircuiting results, the output will be turned OFF. In that case, check the wiring and turn ON the E3G again so that the short-circuit protection circuit will be reset. This function will operate if the output current flow is at least 2.0 times the rated load current. If a capacitive load is connected to the E3G, make sure that the inrush current does not exceed 1.2 times the rated load current.

Mounting

Mounting Conditions

- If Sensors are mounted face-to-face, make sure that no optical axes cross each other. Otherwise, mutual interference may result.
- Be sure to install the Sensor carefully so that the directional angle range of the Sensor will not be directly exposed to intensive light, such as sunlight, fluorescent light, or incandescent light.
- Do not strike the Photoelectric Sensor with a hammer or any other tool during the installation of the Sensor, or the Sensor will loose its water-resistive properties.
- Use M4 screws to mount the Sensor.
- When mounting the case, make sure that the tightening torque applied to each screw does not exceed 1.2 N·m.


Water Resistance


Tighten the operation cover screws and terminal block cover screws to a torque of 0.3 to 0.5 N·m in order to ensure water resistivity.

Dimensions

Sensors

Retro-reflective Models



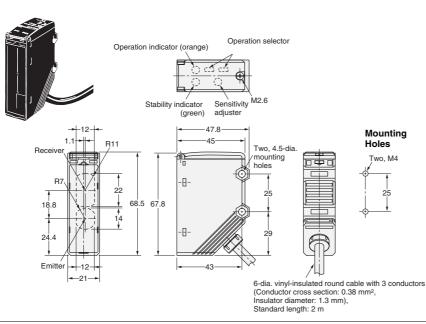

| 12 |

18.8

35.95

2.1-

12-


R11

84.95 84.45

Standard Connector Model E3G-R17




Note: All dimensions other than the ones specified below are the same as the corresponding dimensions of E3G-R13.

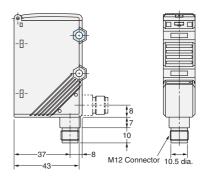


Terminal Block Models E3G-MR19 E3G-MR19T



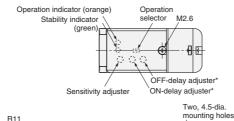

-16寸

*The ON- or OFF-delay adjuster is not available with the E3G-MR19.




Hexagonal nut (Diagonal: 22) Applicable cable: 6 to 8 dia.

PF1/2 conduit: JIS B 0202

Distance-setting Models


Pre-wired Model E3G-L73

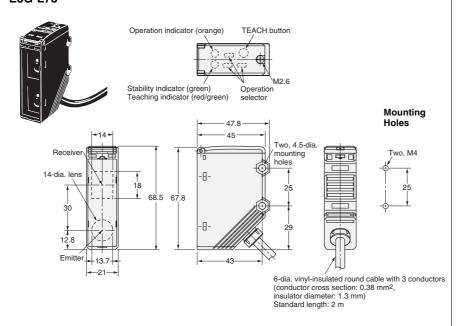


Standard Connector Model E3G-L77



Note: All dimensions other than the ones specified below are the same as the corresponding dimensions of the E3G-L73.

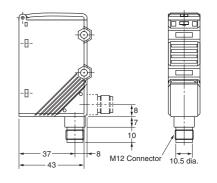


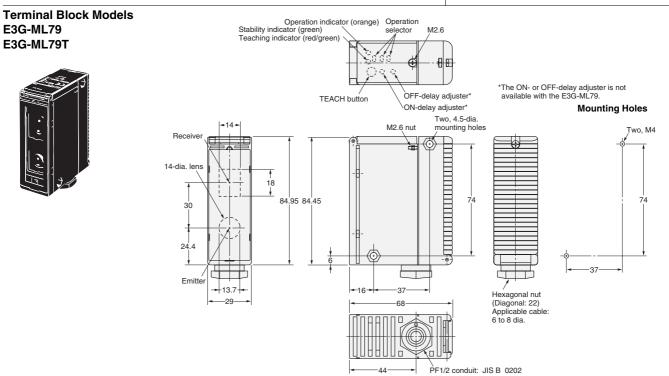

Accessories (Order Separately)

Terminal Protection Cover for Side-pullout Cable E39-L129



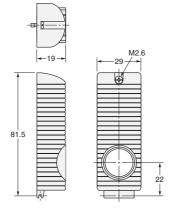


Note: 1. The cover is provided with a rubber bushing and cap to prevent the cable from being pulled out vertically.

2. Refer to page 9 for the mounting method of the

product.

Terminal Protection Cover for Side-pullout Cable (Example: E3G-MR19)

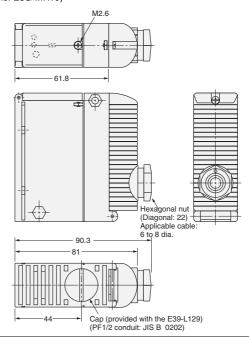

Reflectors

Refer to E39-L/F39-L/E39-S/E39-R for details.

Mounting Brackets

Refer to E39-L/F39-L/E39-S/E39-R for details.

Sensor I/O Connectors

Refer to Introduction to Sensor I/O Connectors for details.

Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

2010.8

In the interest of product improvement, specifications are subject to change without notice.

